

Oil Drip Guard for Draw-Out Expulsion Fuse Holders

GENERAL

Celeco[®] drip guard for use in draw-out expulsion fuse holders prevents the dripping of transformer insulating fluids onto the ground or coming into contact with rubber molded terminators, cables, arresters, when the fuse is removed. It protects from damage rubber products that may be not compatible with certain transformer insulating fluids, and avoid oil spillage.

Innovative and unique positive latching mechanism helps prevent accidental removal, yet permits removal by hand when is necessary.

INSTALLATION


- Accommodate the drip guard ears around the neck of the draw-out expulsion fuse holder.
- Hold both halves of the ears.
- Press to introduce the snap fit into the cage until lock it.
- To remove drip guard, push up the snap and extract to open and remove it.

ORDERING INFORMATION

Product name	Part no.	Pack size
Drip guard	B2032	250 pieces



Figure 1: Oil drip guard reference dimensions

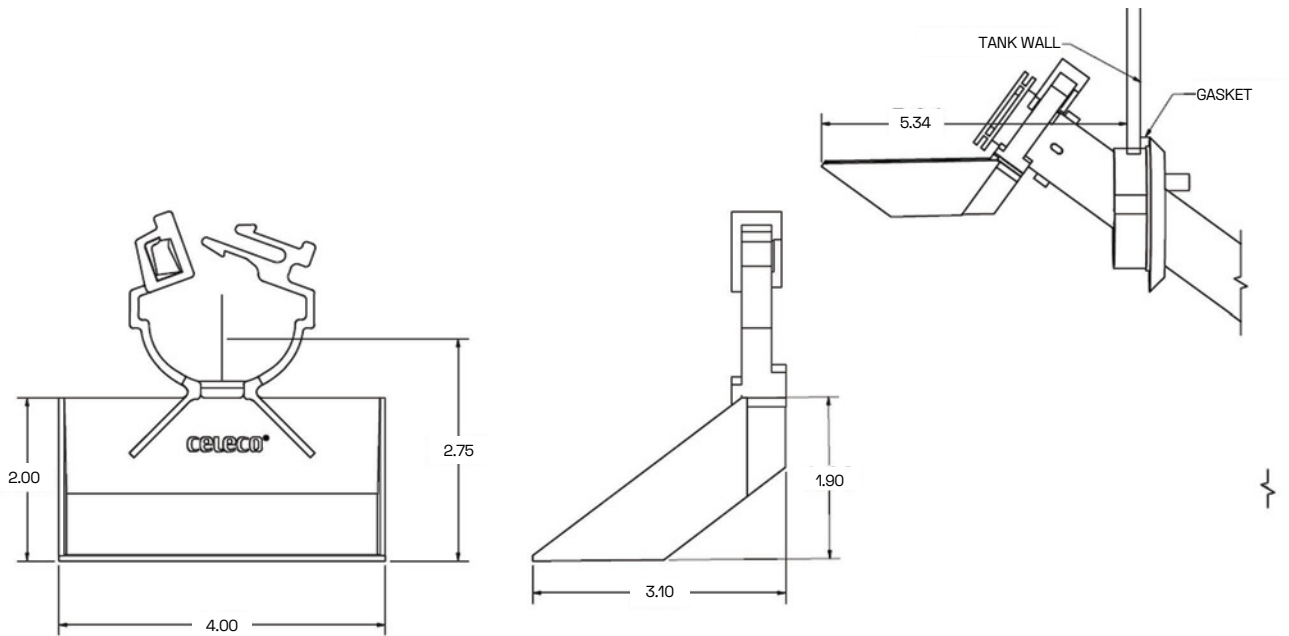

NOTES:

- MATERIAL: POLYPROPYLENE COPOLYMER
- GRADE: GLASS REINFORCED
- COLOR: BLACK
- DIMENSIONS: INCHES
- TOLERANCE: 0.100"